




Active
Stylus Pen



Warning

- This device is designed for indoors use only and to be kept dry.
- Do not deliberately damage the device or expose it to damp, direct sunlight, or high temperature conditions.
- Disassembling or failing to properly use and care for your device will void the warranty on the product.
- ALOGIC bears no responsibility for damage to the device or incidental damages arising from improper use or lack of care and is not liable for repair/ replacement of the device or other damages in these circumstances.
- Do not expose the pen and battery to high temperature. Overheating the battery may cause it to explode
- If the battery leaks, do not make contact with skin or eyes. If accidental contact is made, please rinse with clean water immediately and seek proper medical treatment.
- This pen and its accessories include small parts. Please keep them away from small children.




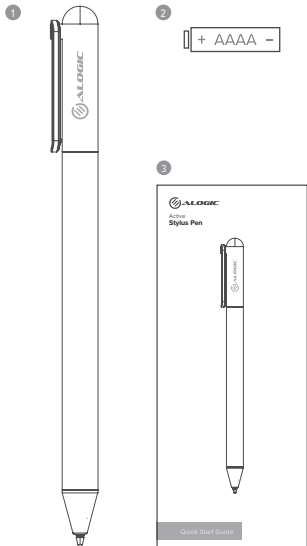

Instructions

1 Before First Use

- 1.1 Unscrew the end cap to replace or install the AAAA Battery

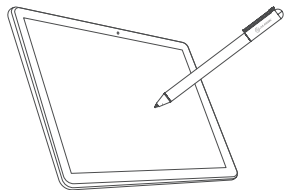

Specifications

Mode	ALUS19
Weight	19g

Package Contents

Active Stylus Pen
User Manual

Compatible Devices

ASUS Chromebook C436, Lenovo Chromebook Duet, Lenovo IdeaPad Flex 5i Chromebook, HP Chromebook x2, HP Chromebook X360 12b, HP Chromebook x360 14b

For more details: <https://goo.gle/USI-Devices>

This product works with devices capable of running the latest version of Chrome OS and has been certified to meet Google's compatibility standards. Google is not responsible for the operation of this product or its compliance with safety requirements. Chromebook and the Works With Chromebook badge are trademarks of Google LLC.

1 Active Stylus Pen

2 AAAA Battery

3 User Manual